





Audi A6 TFSI e

Sedan incl. Avant, 2018-2025

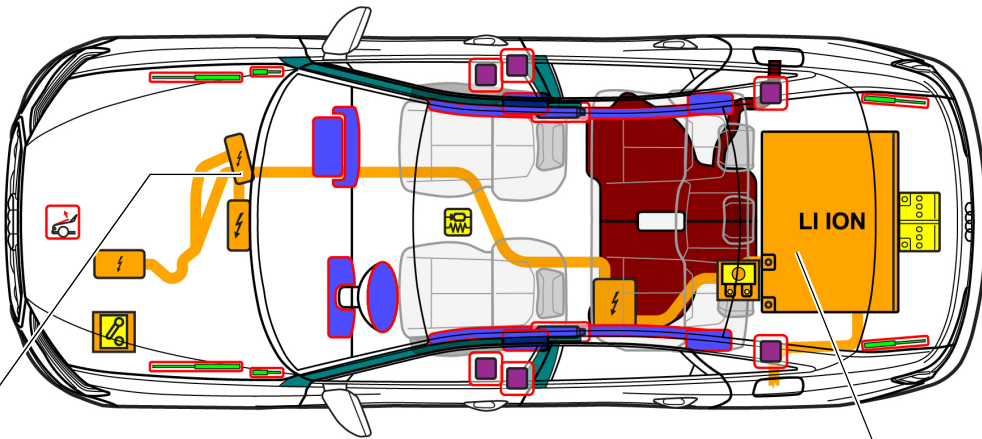

High-voltage component reversed left-to-right on right-hand drive vehicles

400 V
LI ION

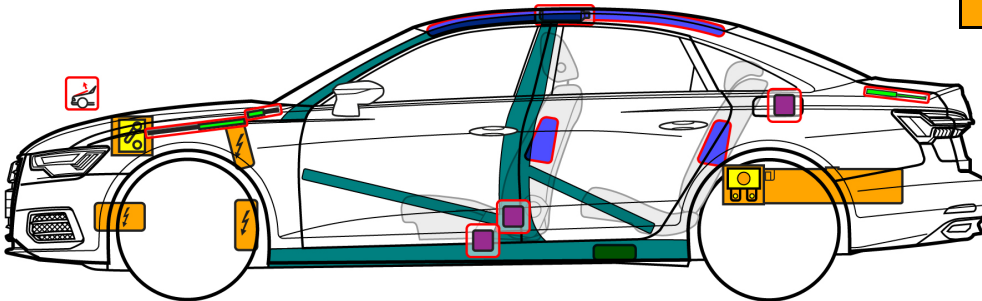

Note: The illustration shows the maximum possible range of equipment.

| | | | | | | | | | |
|--|---------------------------------------|--|---|--|-------------------------|--|---|--|-------------------------------------|
| | Airbag | | Stored gas inflator | | Seat belt pretensioner | | SRS control unit | | Pedestrian protection active system |
| | Automatic roll-over protection system | | Gas strut / preloaded spring | | High-strength zones | | Special attention | | |
| | Battery, low-voltage | | Ultra-capacitor, low-voltage | | Fuel tank | | Gas tank | | Safety valve |
| | Battery, high-voltage | | Power cable, high-voltage | | Separator, high-voltage | | Fuse box, disabling high-voltage system | | Ultra-capacitor, high-voltage |
| | High-voltage separator to low voltage | | Fuse box, disabling high-voltage to low voltage | | High-voltage component | | Fuel tank, petrol | | |



Audi A6 TFSI e

Sedan incl. Avant, 2018-2025

1. Identification / recognition



The electric motor is silent. The display on the left of the instrument cluster (power meter) indicates whether the electric drive is switched "OFF" or "READY" for operation.


Logo

TFSI e



Logos can be deselected

Charging port

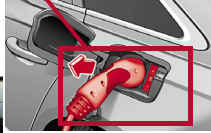

Engine compartment (orange cable)



A6




A6 Avant


2. Immobilisation / stabilisation / lifting


Immobilise the vehicle

Press the Park button "P" and apply the parking brake.

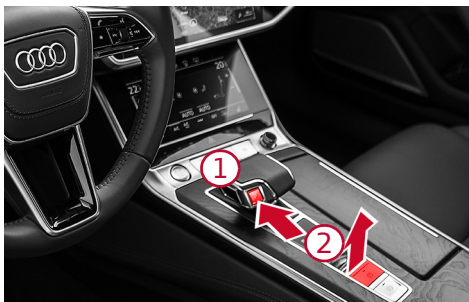

Lifting points

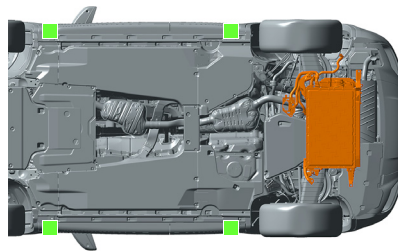

 Suitable lifting points

 High-voltage battery

Turn off the ignition (power meter display "OFF")



Press the START-STOP button without depressing the brake pedal.





A key card or a smartphone app can also be used instead of a remote control key.

3. Disable direct hazards / safety regulations

Deactivate the high voltage system




 Option 1: Separation point in engine compartment

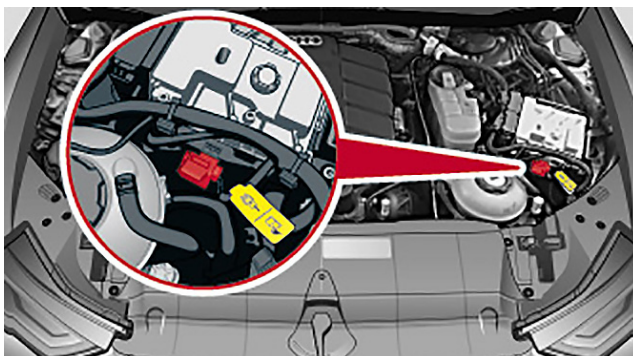

① Pull out red tab

 ② Pull out black connector






Audi A6 TFSI e


Sedan incl. Avant, 2018-2025



Option 2: Fuse in passenger compartment

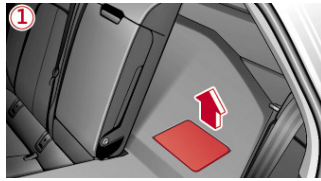

1 Fold the rear backrest forward and open the cover

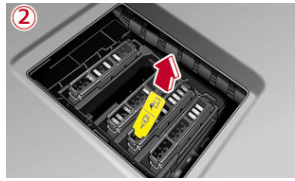

2 Pull out fuse



Do not touch, cut or open high voltage components or the high-voltage battery. Wear suitable safety equipment.

In the event of an accident in which the airbags are deployed, the high-voltage system will be automatically deactivated. The high-voltage system is de-energised approx. 20 seconds after deactivation.


Disconnect the 12-volt battery (in the boot on the right-hand side of the vehicle)




Remove the cover




Disconnect the negative terminal

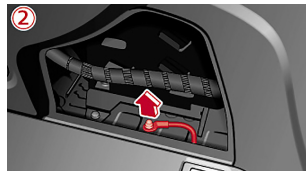

 
Separate from charging station (emergency release in the boot on the left-hand side of the vehicle)




Remove the cover

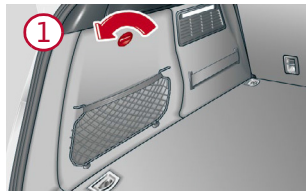


Release the yellow loop from the retainer and pull it

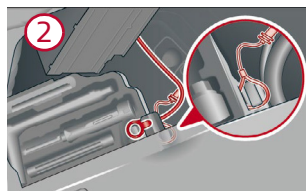

Disconnect the charging connector

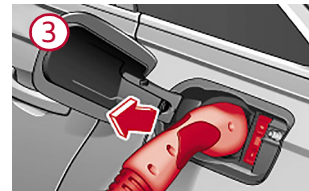

4. Access to the occupants

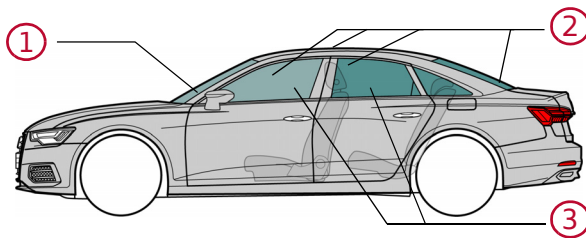

Glass types:

- ① Composite safety glass
- ② Single-layer safety glass
- ③ Side windows, optional Composite safety glass

5. Stored energy / liquids / gases / solids



400 V



52 l



Audi A6 TFSI e

 
Sedan incl. Avant, 2018-2025



12 V




There is a risk of a thermal reaction in the high-voltage battery if coolant escapes from the battery cooling system. Monitor the temperature of the high-voltage battery.



6. In case of fire



 Lithium-ion batteries can self-ignite spontaneously or after a delay in the event of damage or incorrect use, and can re-ignite after a fire has been suppressed. Wear suitable safety equipment.




7. In case of submersion

After recovering the vehicle from the water, deactivate the high-voltage system (see Section 3) and allow the water to drain off. Wear suitable safety equipment.

8. Towing / transportation / storage



 Lithium-ion batteries can self-ignite, or re-ignite after a fire has been extinguished.



If the vehicle has been involved in an accident or if the HV battery is damaged or suspicious: Deactivate the high-voltage system (see Section 3). Park the vehicle at a safe distance, at least 5 m, from buildings and other vehicles (quarantine area).



Do not tow a vehicle that has been involved in an accident on its drive axles.



9. Important additional information

10. Explanation of pictograms used

| | | | | | | | |
|-----------------|---|------------------------|---------------------------|----------------------|----------------------------|-----------------------------|----------------------|
| | | | | | | | |
| Flammable | Explosive | Caustic, skin irritant | Hazardous to human health | Environmental hazard | Petrol hybrid vehicle | Petrol vehicle | Warning High voltage |
| | | LI ION | | | | | |
| Caution, danger | Use lots of water to extinguish the fire. | Lithium-ion battery | Dangerous voltage | Release the bonnet | Unlock luggage compartment | Use thermal infrared camera | Remove smart key |